


1

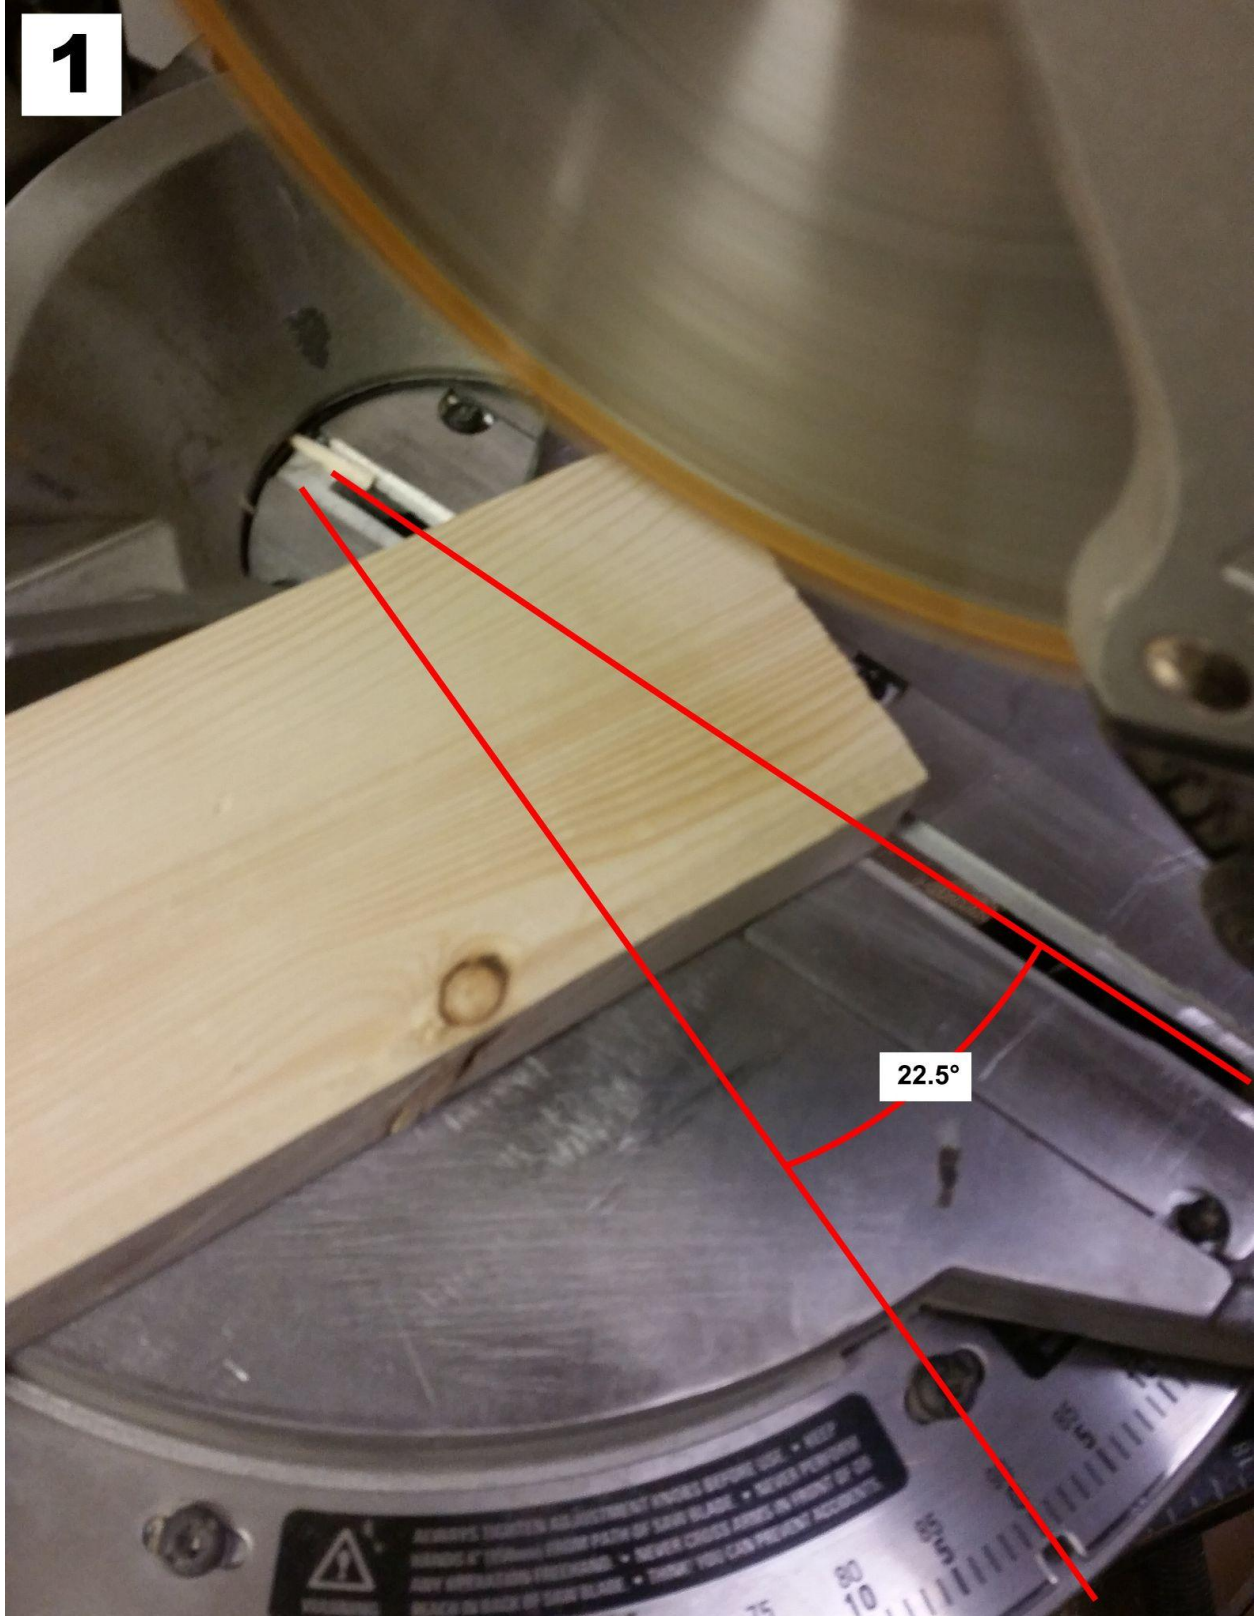


22.5°

WARNING  
ALWAYS SHUTTER ADJUSTMENT KNOBS BEFORE USE • KEEP  
HANDS 6" AWAY FROM PATH OF SAW BLADE • NEVER PERFORM  
ANY MAINTENANCE OPERATIONS • NEVER CROSS ARM IN FRONT OF OR  
REAR OF SAW BLADE • THINK YOU CAN PREVENT ACCIDENTS

75 80 10


2

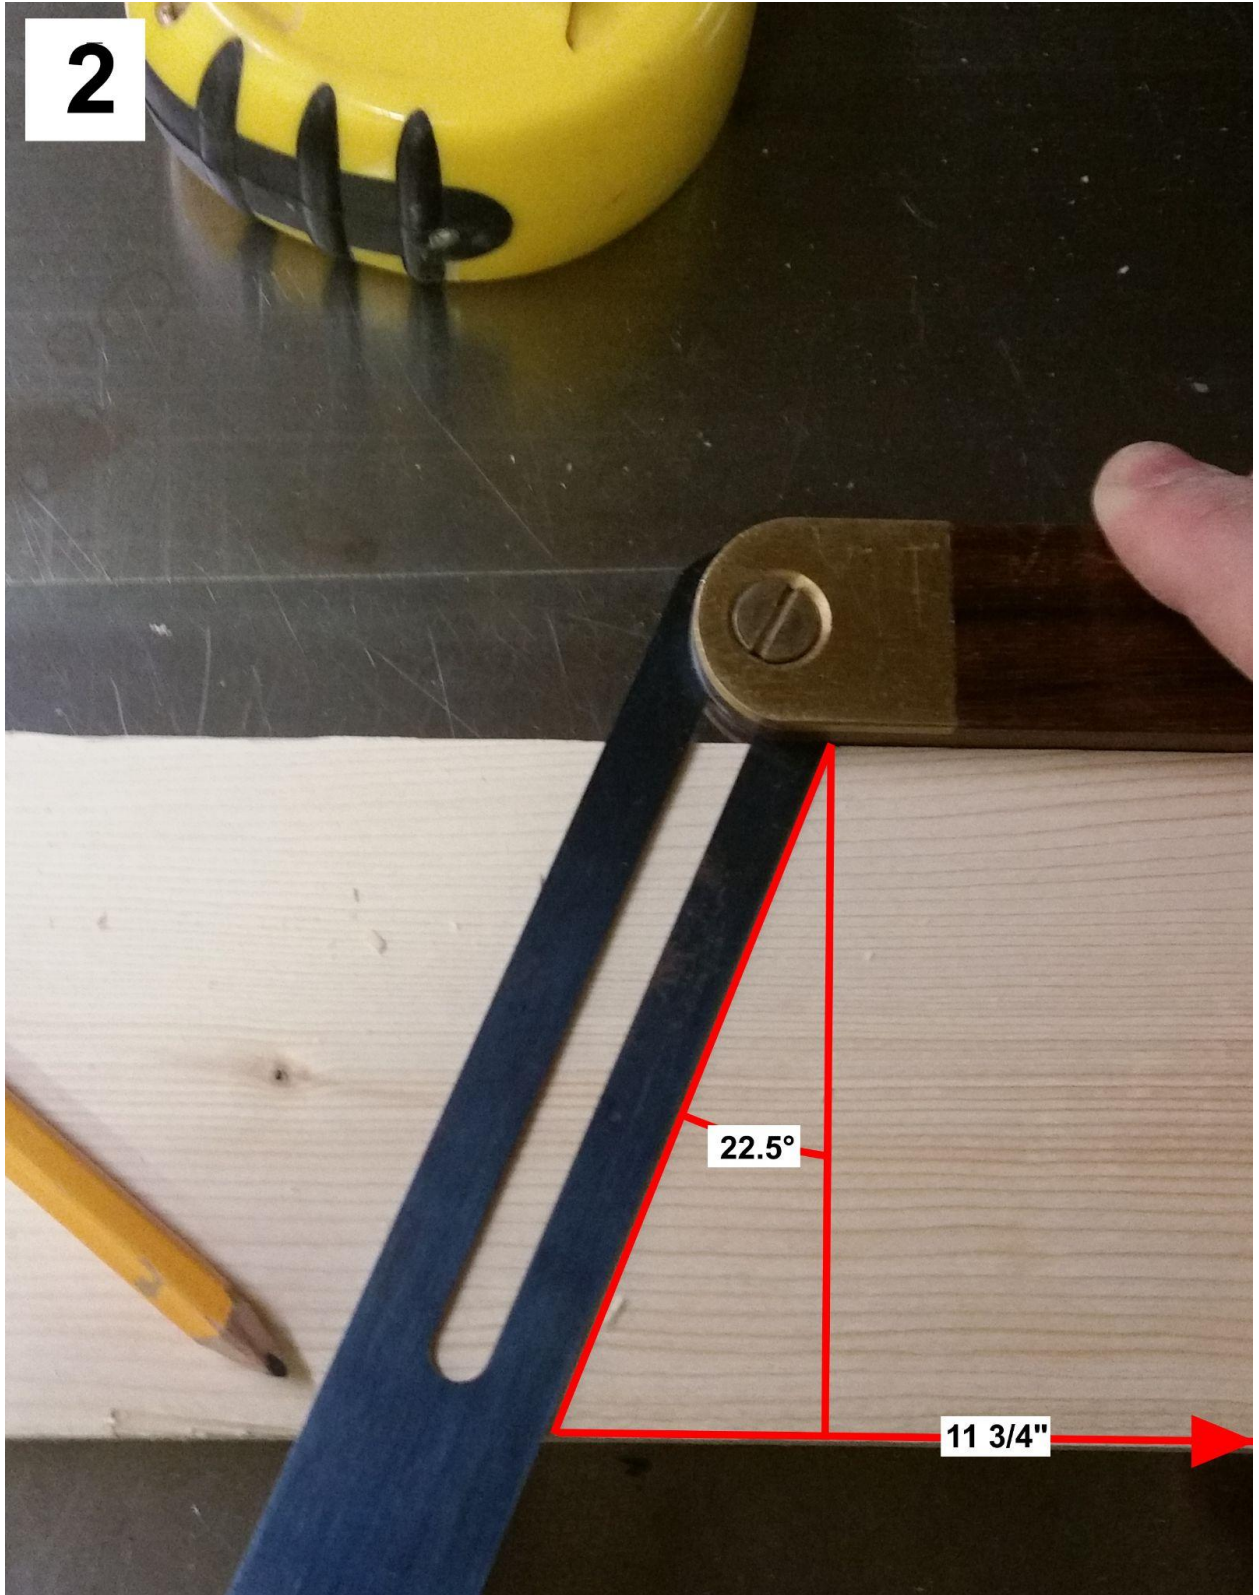

**3**

**11 3/4"**


**9"**

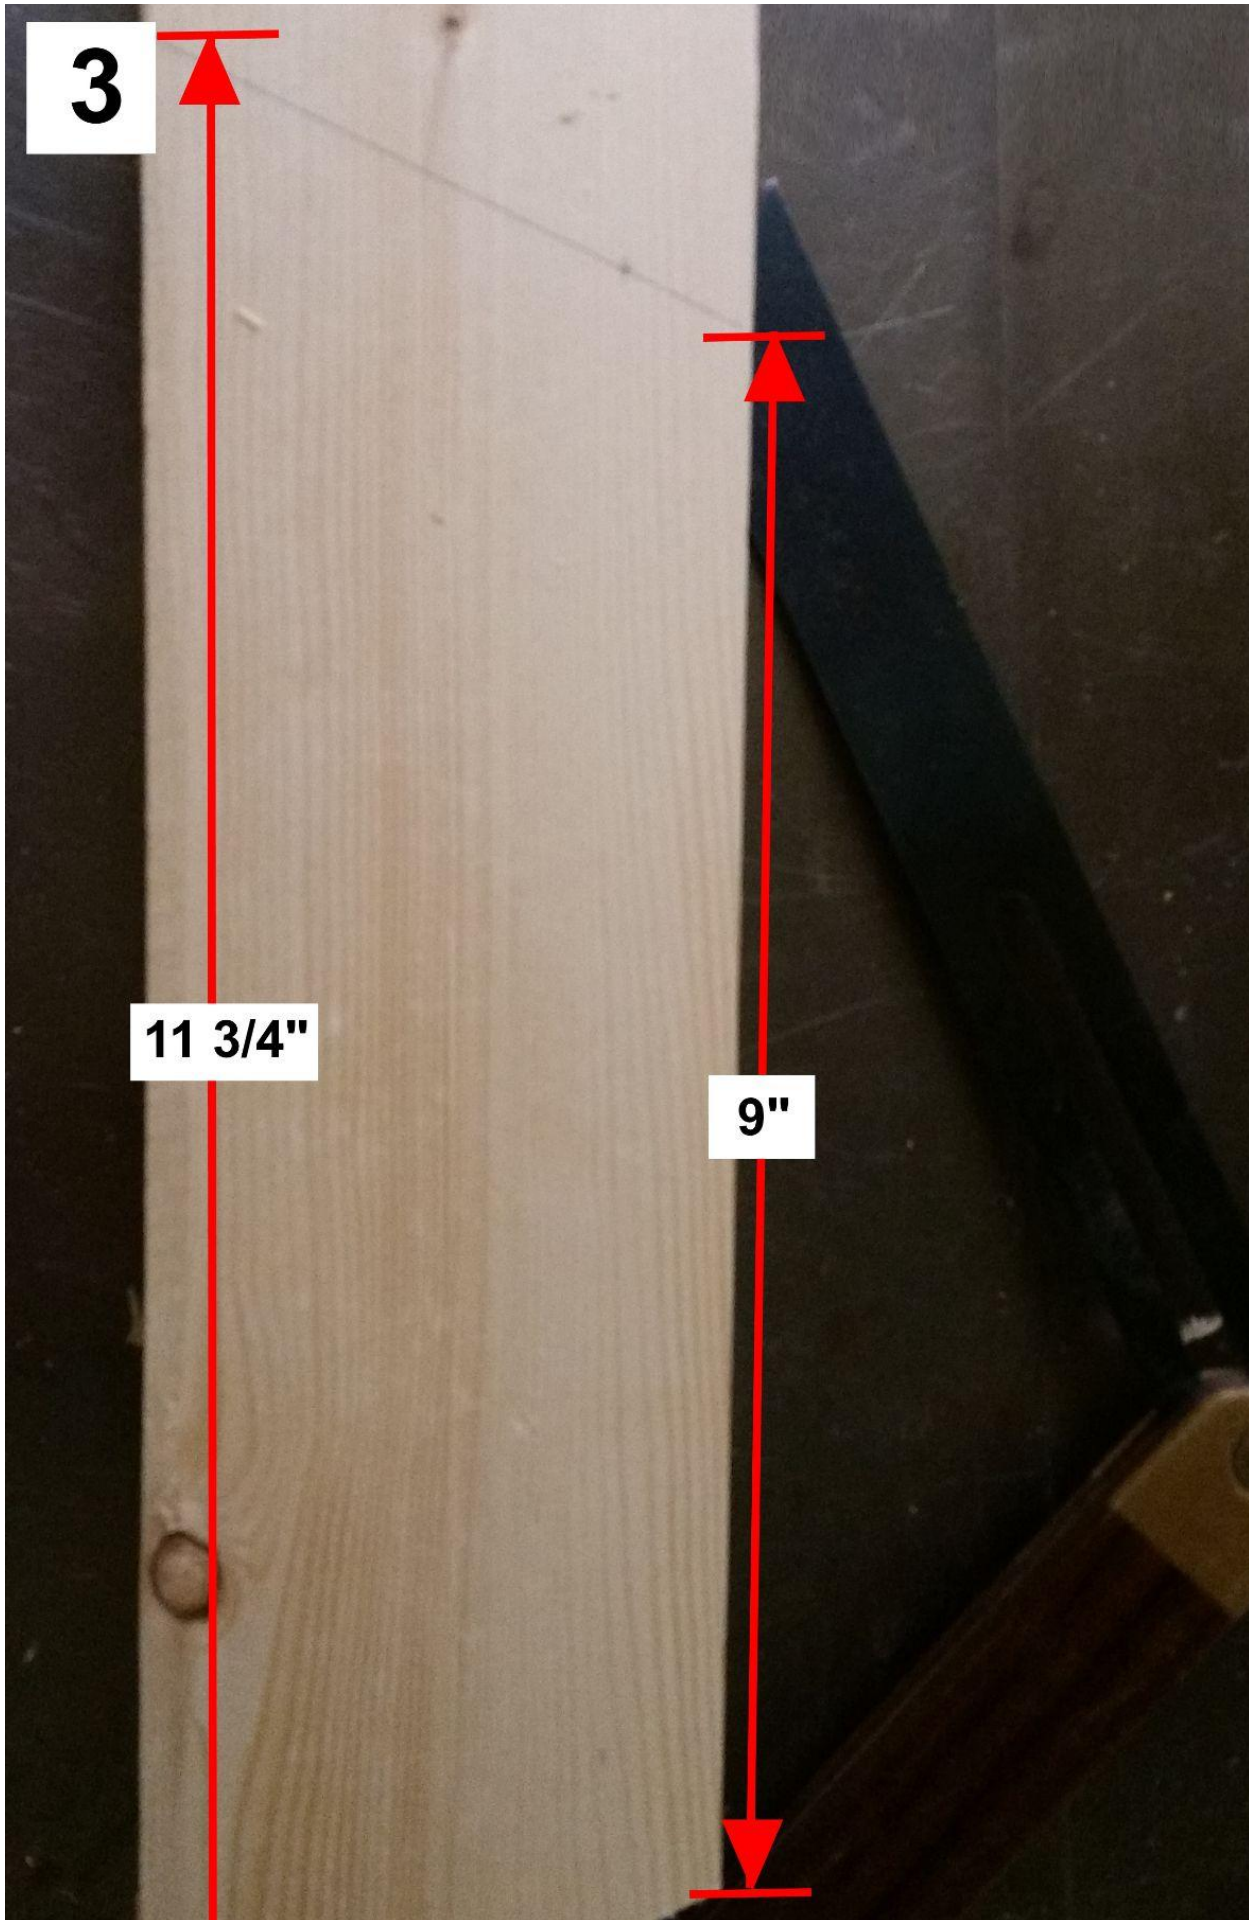


4



5

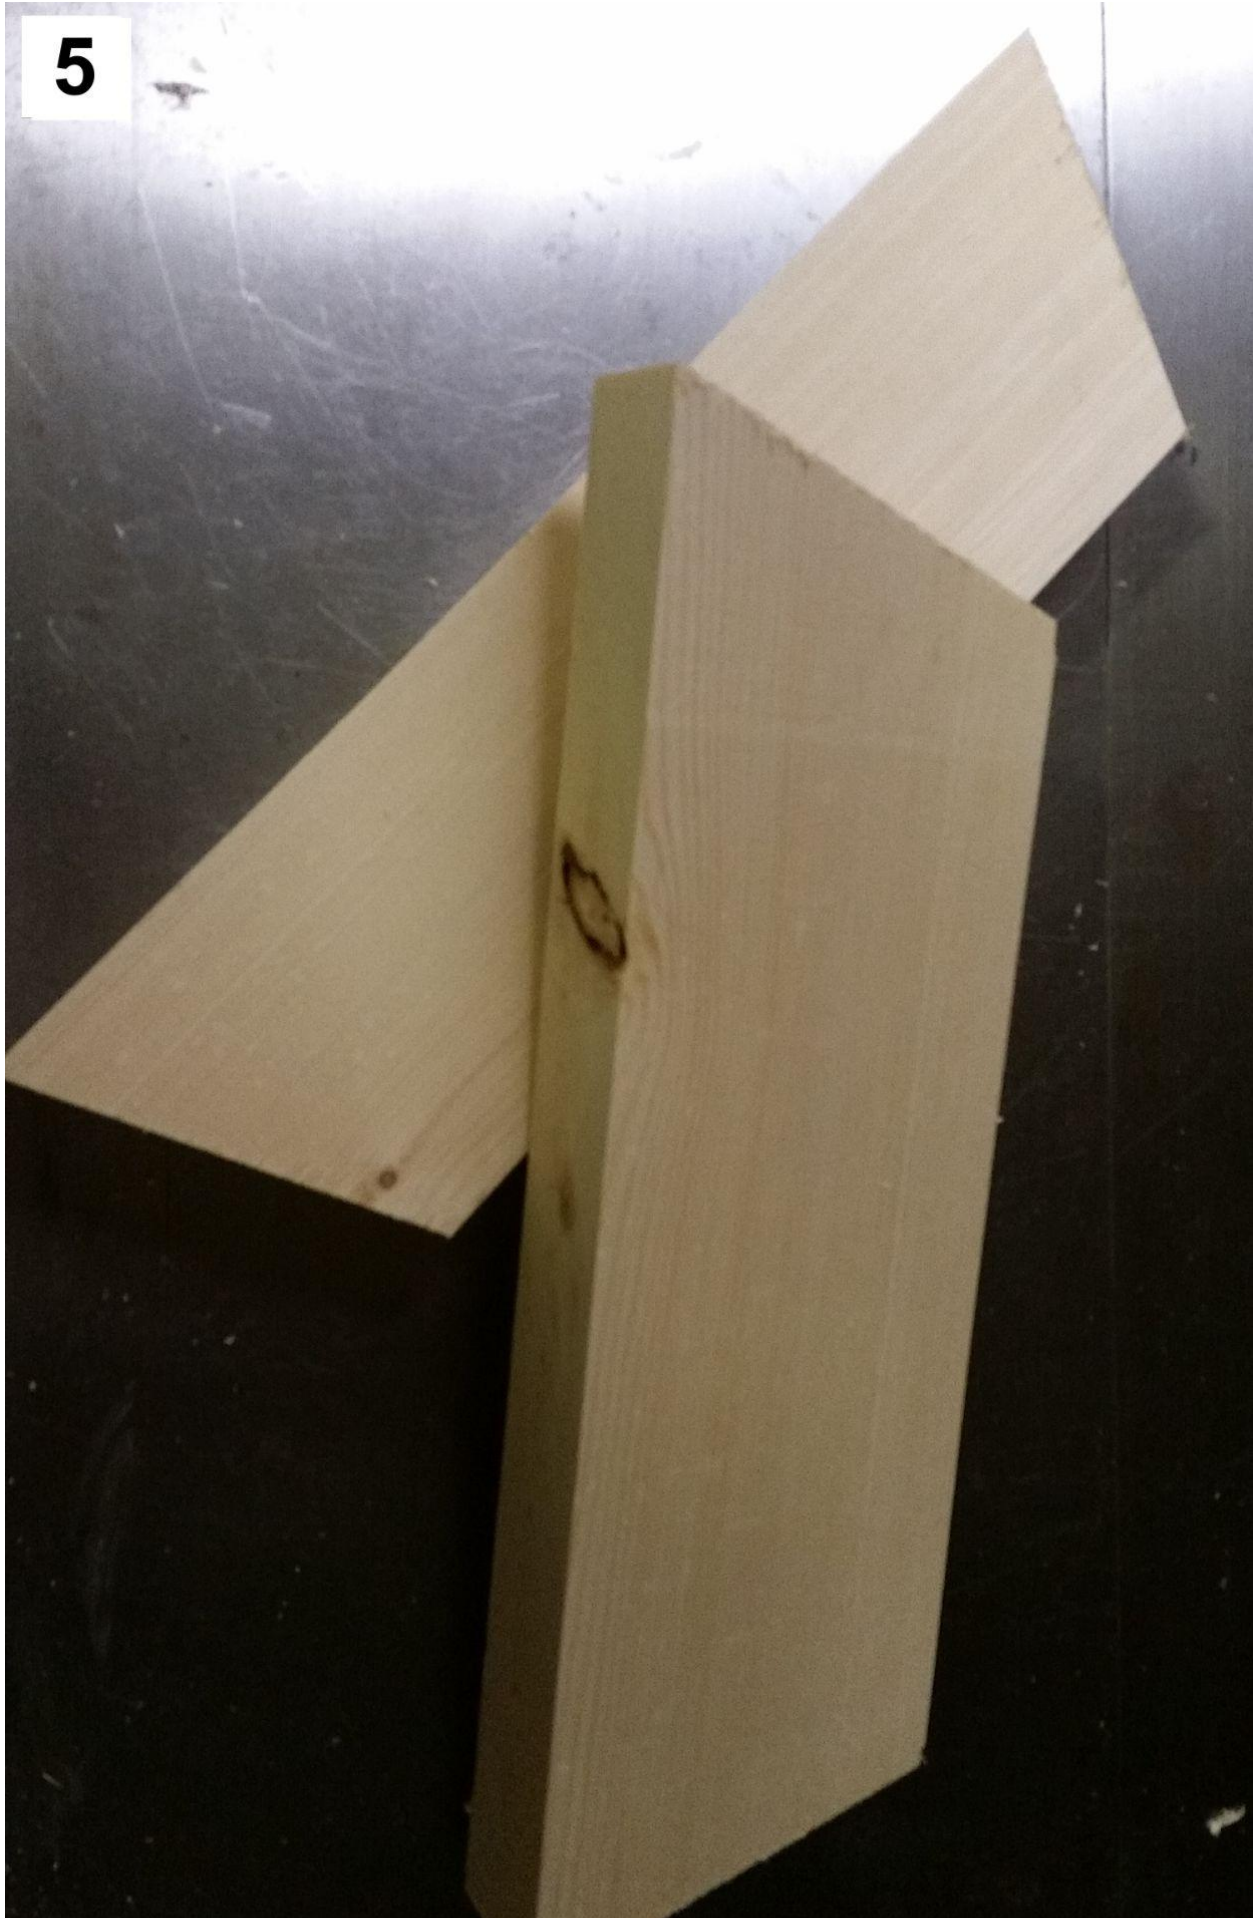


6

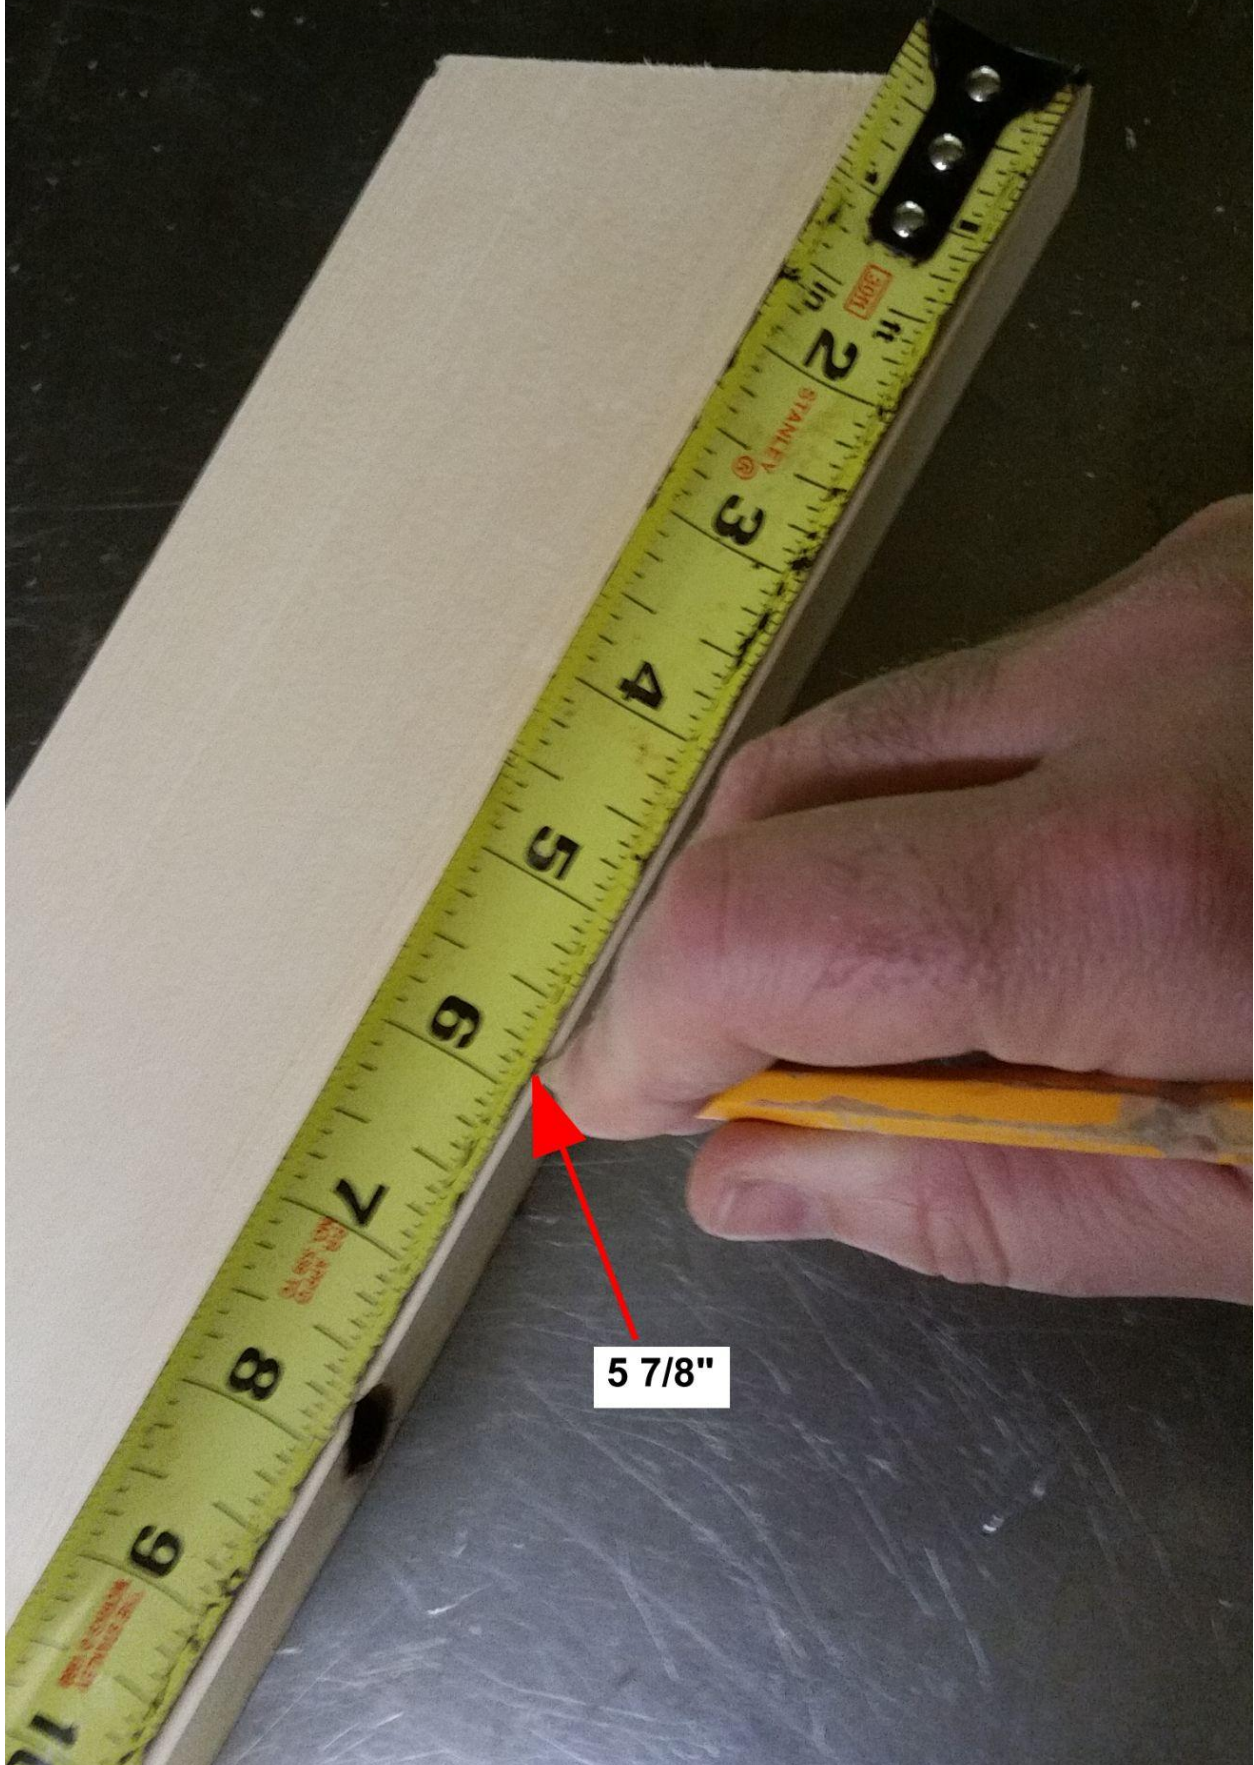

5 7/8"

7

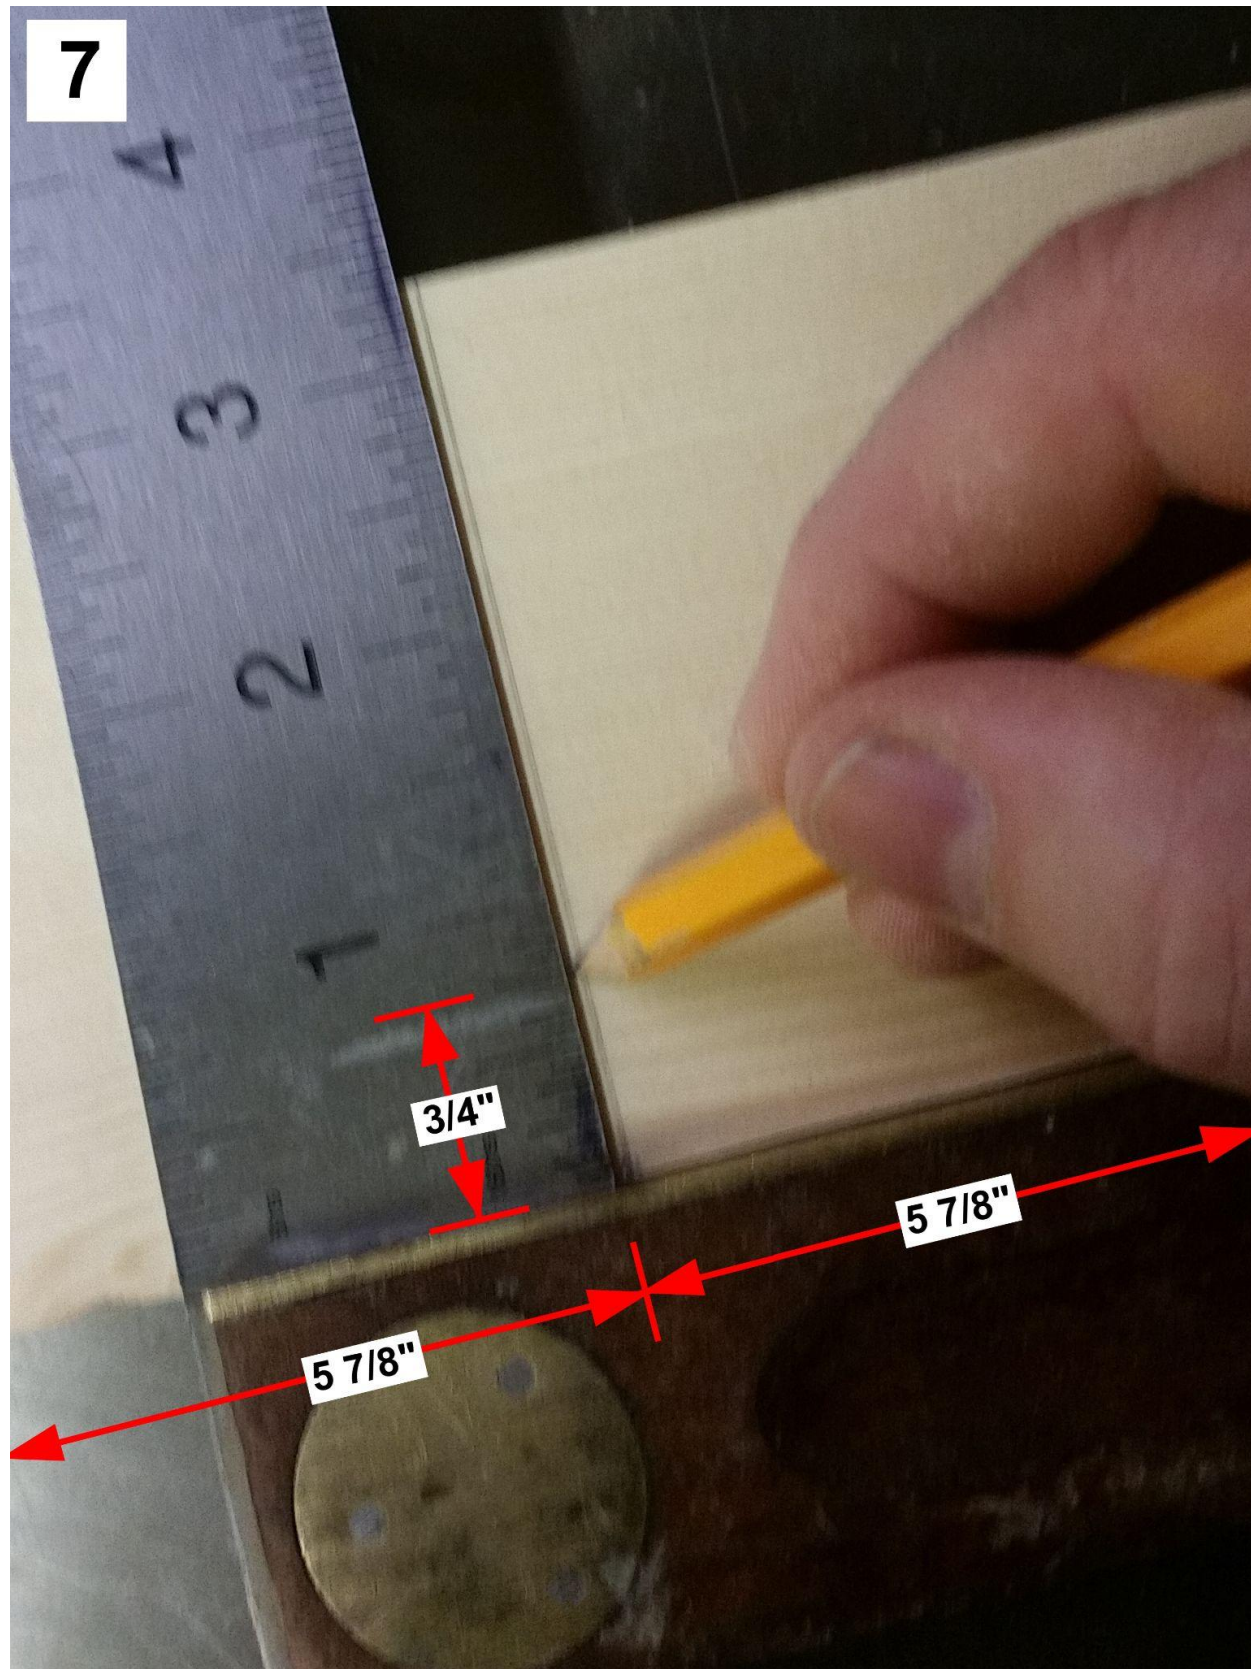

8

1 1/2"





9



**10**

