PROFESSIONAL SERIES
SPRAYER

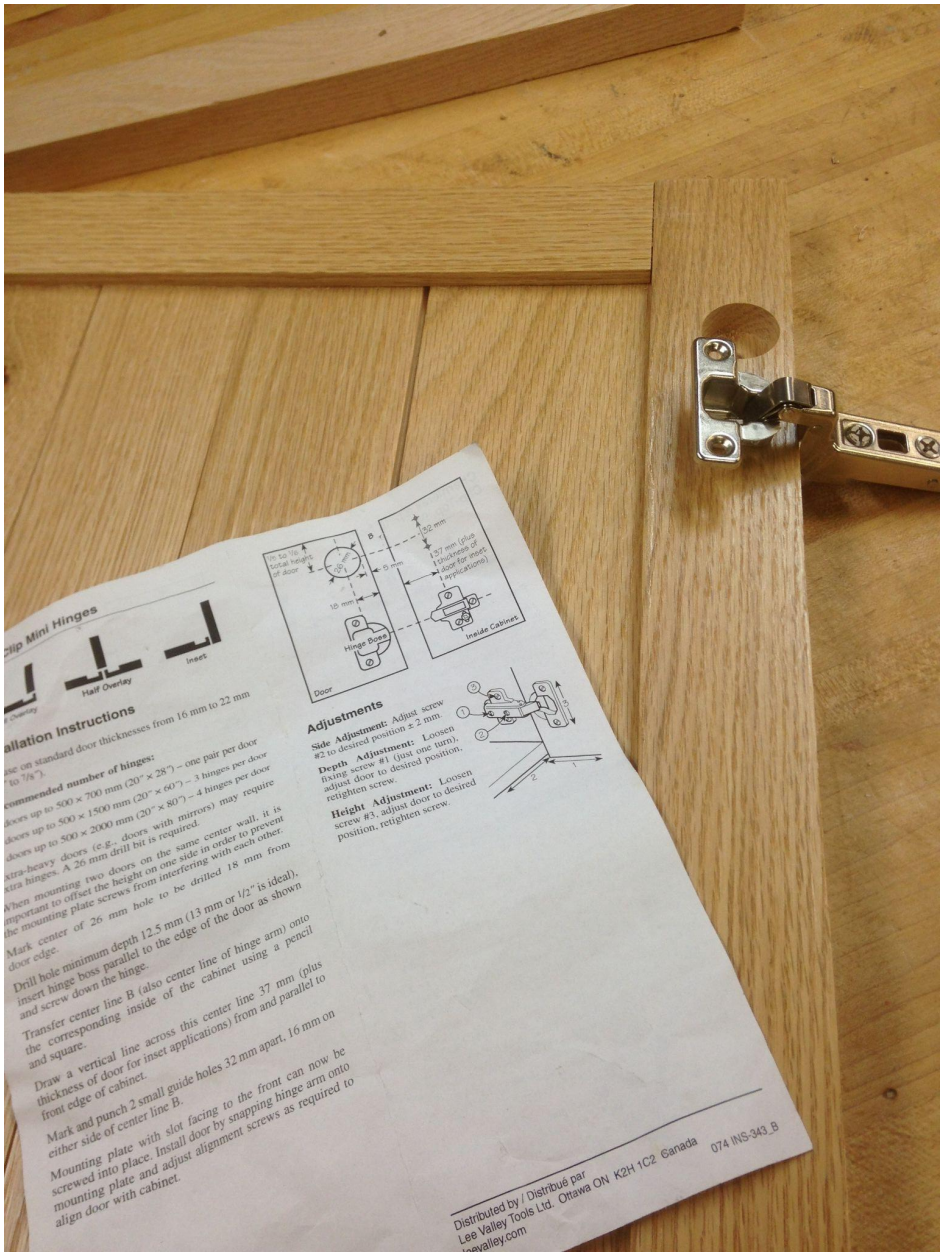
Clip Mini Hinges
Inset
Half Overlay
allation Instructions
ase on standard door thicknesses from 16 mm to 22 mm
" to 7/8").
ommended number of hinges:
doors up to 500 × 700 mm (20" × 28") – one pair per door
doors up to 500 × 1500 mm (20" × 60") – 3 hinges per door
doors up to 500 × 2000 mm (20" × 80") – 4 hinges per door
xtra-heavy doors (e.g., doors with mirrors) may require
xtra hinges. A 26 mm drill bit is required.
When mounting two doors on the same center wall, it is
important to offset the height on one side in order to prevent
the mounting plate screws from interfering with each other.
Mark center of 26 mm hole to be drilled 18 mm from
door edge.
Drill hole minimum depth 12.5 mm (13 mm or 1/2" is ideal),
insert hinge boss parallel to the edge of the door as shown
and screw down the hinge.
Transfer center line B (also center line of hinge arm) onto
the corresponding inside of the cabinet using a pencil
and square.
Draw a vertical line across this center line 37 mm (plus
thickness of door for inset applications) from and parallel to
front edge of cabinet.
Mark and punch 2 small guide holes 32 mm apart, 16 mm on
either side of center line B.
Mounting plate with slot facing to the front can now be
screwed into place. Install door by snapping hinge arm onto
mounting plate and adjust alignment screws as required to
align door with cabinet.
Adjustments
Side Adjustment: Adjust screw #2 to desired position ± 2 mm.
Depth Adjustment: Loosen fixing screw #1 (just one turn), adjust door to desired position, retighten screw.
Height Adjustment: Loosen screw #3, adjust door to desired position, retighten screw.
Distributed by / Distribué par
Lee Valley Tools Ltd. Ottawa ON K2H 1C2 Canada
leevalley.com
074 INS-343_9

BREAD